



Installation Instructions: Attaching Metal Posts to WBSF Line of Products using “Trenching Method”

Step One

Cut a trench 4” wide and 8” deep.




8” Deep

4” Wide


Step Two

Drive the metal t-post into trench. Ensure the fabric faces the sediment flow.

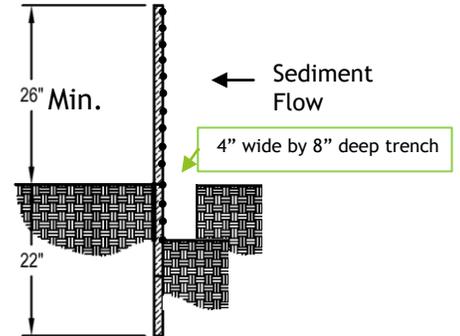

Step Three

Place the WBSF Fabric into the trench. Ensure the fabric goes 8” down and 4” across in an “L” pattern. Keep ground level marker at top of trench.

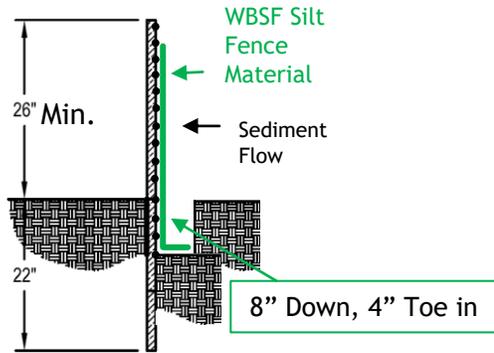

Step Four

Use an Awl to separate the threads of the fabric on the top left and bottom right of the woven belts. **Do not cut fabric.** Slide 8” Black UV 120lb tensile strength Zip Tie through the holes and around post. Ensure that the zip tie is between two of the post bumps. Secure tightly.



Step Five

Repeat for each of the four belts.

Attachment and Linear Support Belts



Step Six

Compaction of soil is critical to ensure proper performance.

Fill and compact both sides of the silt fence.

