



# HOW TO INSTALL SLOPE DRAIN BAG (SDB)


## Installation Instructions

**Step 1.** Place Slope Drain Bag on a surface that is stable and slightly elevated on the receiving end.

**Step 2.** Green Mesh overflow facing up.



**Step 3.** Attach Slope Drain Bag to HDPE Pipe 12" or smaller using the straps provided.

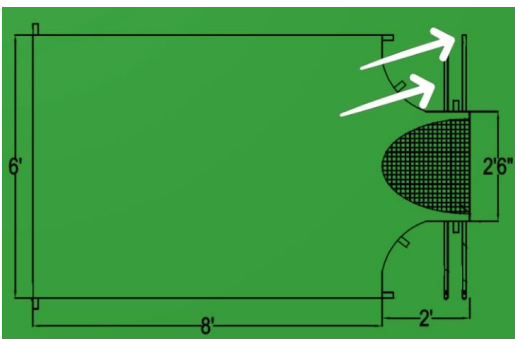

**Step 4.** The Slope Drain Bag has 8 loops for stakes. We only stake 7 of those loops. The bottom low side loop is left open for bag expansion.



Highest side bottom gets stake

