



Installation Instructions: Installing Preassembled BSRF Priority 1 and Priority 2 using "Trench Method"

Step One

Cut a trench 4" wide and 8" deep.



8" Deep

4" Wide

Step Two

Pull fence along side of trench. Ensure that the material faces the direction of sediment flow.




Demo of Fan Fold, BSRF not pictured.

Priority 1 and Priority 2 are fan folded.


Step Three

Place post to the back side of trench.

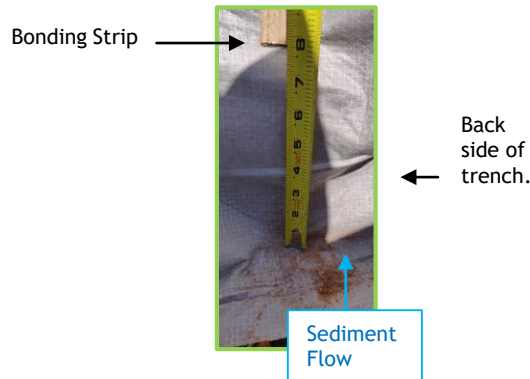


Step Four

Drive the Post into trench until Ground level line is even with the top of the trench.

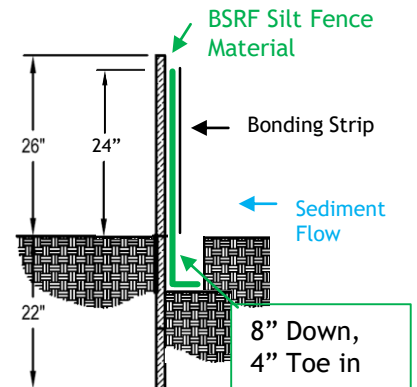


Step Five

Place the WBSF Fabric into the trench. Ensure the fabric goes 8" down and 4" across in an "L" pattern. Keep bottom of bonding strip at top of trench

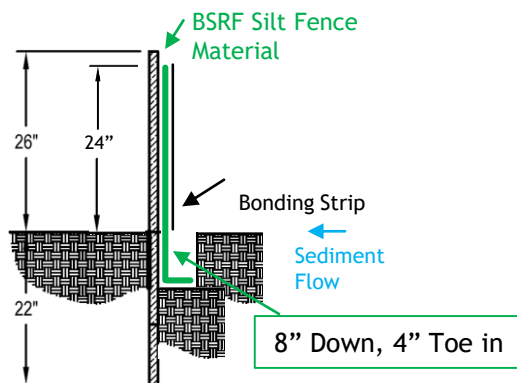

Note:
When two rolls meet, twist end posts together and drive into trench.

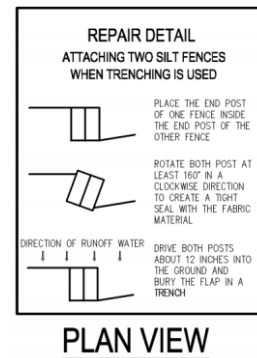

Step Six

Compaction of soil is critical to ensure proper site protection.

Fill and compact both sides of fence

